iPazzPort®

User Manual

iPazzPort Universal Remote

Model:KP-810-19R/19VR

Rev. 1.0

www.iPazzPort.com

Contents

Introduction 1
Package 2
Feature 2
Specifications 2
System Requirement 2
Power Switch 3
Recharge your keyboard 3
Change operation directions 3
Button Functions 4
SAT Functions 6
DVD Functions 6
TV/VCR/INPUT 6
Function description of keyboard 7
Binds keys description 8
Setup 9
Battery Saver 9
Code Saver 9
Power-on Default 9
Code Setup 9
Code Entry 9
Direct Code Entry 9
Code Search 10
Code Search by Brand 10
Code Identification Feature 11
Programming Combo Device Codes 11
Controlling Combo Device 12
Controlling Device Requiring Separate Power On And Off Buttons 12
VCR/DVD/DVR Punch-Through Feature 13
Volume/Mute Control and Punch-Through Feature 13
Setting All Volume/Mute Control to any one Mode 14
Setting any Mode to use its own Volume/Mute Control 14
Troubleshooting 15
Limited Lifetime Warranty 15
Activate audio 15

Introduction

Congratulations on your purchase of iPazzPort Universal wireless Remote Control.iPazzPort Universal wireless Remote consists of keyboard, mouse touchpad, and Universal IR remote which is designed small and portable size. It provides people a unique & capable tool to operate their personal computer wirelessly. it is widely used for:

- The people who need to be apart from their devices yet must control it for their presentation, teaching and lecturing with large screen or projector, up to 33 feet wireless operation distance provides you big free space to communicate with your audience.
- The people who want to sit at their easy and comfortable chair to view the internet content, network television, such as IPTV, Google/ Android/Smart TV, box or internet movies instead of physically change its channel, it is a really computer remote controller, of course not a TV remote controller.
- iPazzPort Universal wireless Remote let you replace a broken or lost remote or combine more than one remote into one. In addition, this remote is equipped with a command learning feature which lets the remote learn commands from your original equipment remote control! This remote control operates the common features of most but not all models and brands of IR Infrared Controlled Video Equipment. This remote may provide functions that are not available on your equipment. Some functions of your particular equipment（e. g. menu functions）may not be controlled by this remote. In such cases, use the original remote control for your equipment. Please use this manual to become familiar with your Unisengroup Remote. After you are familiar with your remote the first thing you need to do is to install batteries and setup your remote for your particular product and brand.
- Thank you for buying a iPazzPort Universal wireless Remote and we hope it will give you many years of service.

Package

- Wireless Keyboard with Universal IR remote
- USB Receiver
- USB cable for recharding the unit
- User Manual

Feature

- R.F 2.4G connection
- Rechargeable lithium-ion battery
- USB receiver, Plug and play
- Ultra sensitive mouse touchpad
- QWERTY keyboard
- Universal IR remote control
- Integrated wireless microphone and speaker (optional for 19VR)

Specifications

- Battery capacity: 400mA
- Charge voltage: DC 5V/300mA
- Standby time: 400 hours
- Size: 158mm*60mm*15.4mm
- Weight: 100g

System Requirement

- Windows
- Mac OS
- Linux
- Google/Andiord/Smart OS

Power Switch

Insert USB receiver into USB prot in the computer,system will find new hardware “ Wireless Audio HID Device” and will install driver automatically, Turn unit on after driver installation successfully by switching power button to on, LED (•) will flash one time then go out. That means your keyboard and computer have built connention and they are paired.

Recharge your keyboard

When your keyboard backlit flash without any operation that means your keyboard is in low charge, and needs to recharge, Connect your keyboard to your computer with mini end of USB cable to your keyboard and another end to computer, then led will light up with steady on, and go out when it is fully recharged, and LED will go out.

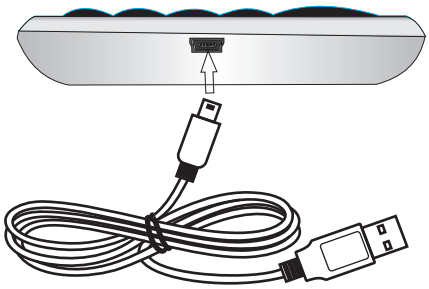

Change operation directions

As we know, some times, we want to operate the wireless keyboard vertically, and some times horizontally, when operation direction is changed from vertically to horizontal, but touchpad will not, for example, supposed you operate unit vertically, and you slide your finger on the touchpad vertically, the mouse cursor on the screen of computor will move vertically but when operation direction is changed from vertical to horizontal, when you slide your finger vertically and mouse cursor will move horizontally, now please press key Fn together with key Esc to change its operation direction, and mouse cursor will move with your finger direction.

Button Functions

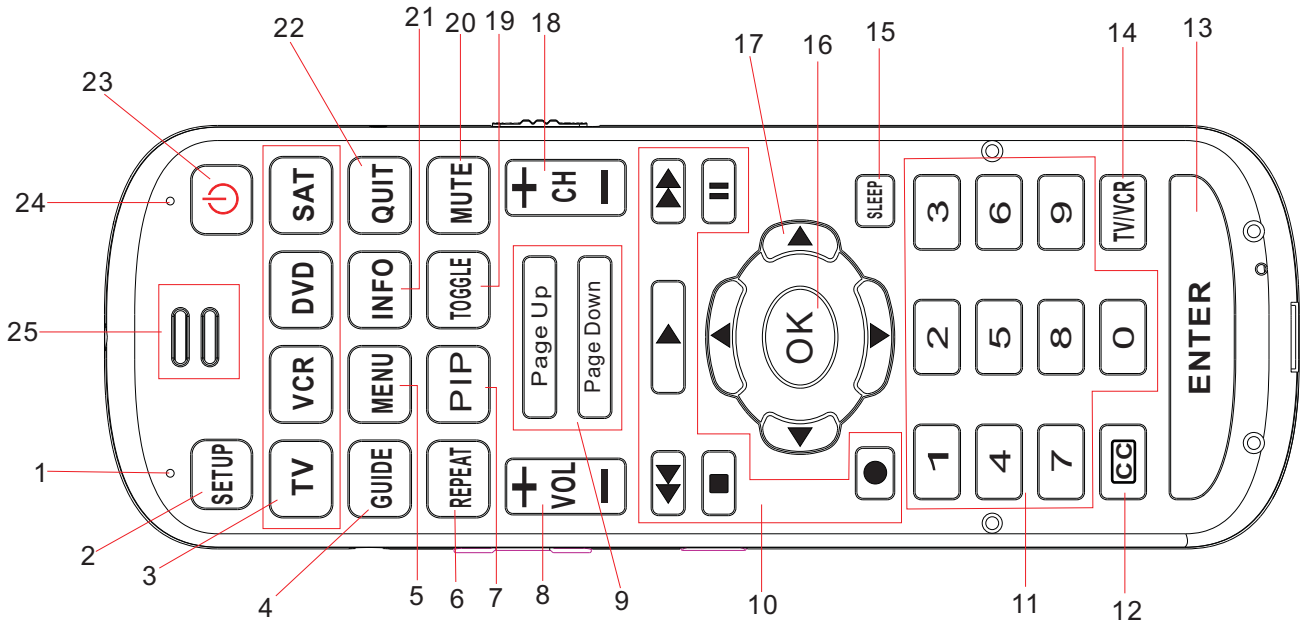

Note: The REC button must be pressed twice to record from your VCR. For some brands of VCRs, you might need to press the REC button once, then press it again for three seconds.

Some buttons on the remote might have functions that are referred to by different names on the device you are controlling. E.G. PREV.CHAN may be called RECALL, or ENTER may be called DISPLAY. These differences depend on the brand and model of your product. Also,this remote can only operate features that exist on your product. E.G., your product must have PREV.CHAN ability for the PREV.CHAN button to operate this feature.

1. Red Indicator Lights when any IR button is pressed or Blue indicator Lights when the audio feature is activated(optional for KP-810-19VR)
2. SETUP Used for setup.
3. TV, VCR, DVD, etc. Selects product to be operated.
4. GUIDE brings up the DVD Title Menu screen.Displays on-screen program guide.
5. MENU brings up the DVD disc Menu screen - use with the UP, DOWN, LEFT & RIGHT navigation buttons.T-CENTRAL The TiVo key for TiVo Central.
6. REPEAT Replays the last 8 seconds of a program.
7. PIP.
8. VOLUME UP/DOWN Changes the volume level of the product, normally the TV.
9. Page Up/Down.
10. RECORD, PLAY, STOP, REW, FF, PAUSE, VCR control buttons operate your VCR even when the remote is set to operate the TV.
11. NUMBERS Enter numbers for direct channel selection. Some products require Enter to be pressed after channel selection..
12. CC Used for digital channels, e.g. 2-3
13. ENTER Used after direct channel number entry to immediately change to the selected channel.
14. TV/VCR.
15. SLEEP
16. SELECT Selects menu items for the device you are controlling.
17. UP, DOWN, LEFT & RIGHT navigation buttons.
18. CHANNEL UP/DOWN Changes the channels. CHAPTER +/- controls DVD/CD track selection i.e.DVD/CD Track Skip Up/Down (in DVD and SATmodes). Note the VCR buttons also control DVD when in DVD Mode.
19. TOGGLE .
20. MUTE Turns off the TV sound while the picture remains.
21. INFO Displays/selects on-screen channel information.
22. QUIT Use to exit menu functions.
23. POWER Turns product On or Off.
24. On as charging and off as full charging
25. Microphone (optional for KP-810-19VR)

➢SAT Functions

GUIDE button displays on-screen Satellite Channel Guide.
CHANNEL + and CHANNEL -buttons perform the “Page +” and “Page -” function for on-screen Guide Menus used by some Satellite systems.
INFO button brings up Satellite Display screen for current Channel and system information.
MENU brings up the Satellite Menu screen-use with the UP,DOWN,LEFT & RIGHT navigation buttons.
OK button is used for on-screen Menu selection.
QUIT button is used to Exit or Clear on-screen Menu displays.

➢DVD Functions (labeled in blue)

CHANNEL + and CHANNEL - button respectively locate the succeeding or preceding Chapters or Tracks on a disc.
LAST button performs DVD players “A-B Repeat ” (or RPTA.B) function for repeat play of current Chapter or Track.
INFO button brings up DVD Display or Control Menu for Chapter/Track/ Title number, Time remaining/elapsed indication, system information, etc.
MENU brings up the DVD disc Menu screen - use with the UP, DOWN, LEFT & RIGHT navigation buttons.
OK button is used for on-screen Menu selection. Note some DVD players require the Play button to be used.
SUBTITLE ON-OFF (CC) Turns the subtitles on or off.
QUIT Exit On-Screen Menus and/or Return to previous On-Screen selection.
Note, not all DVD Players support all the functions described above.

➢TV/VCR/INPUT

When in TV mode the TV/VCR/INPUT button performs the INPUT source switch function.
When in a mode that has been programmed for VCR the TV/VCR/INPUT button performs the TV/VCR antenna switch function.
When in a mode that has been programmed for Cable theTV/VCR/INPUT button performs the A.B switch function.
When in a mode that has been programmed for SAT the TV/VCR/INPUT button performs the TV/SAT switch function.
When in a mode that has been programmed for DVD the TV/VCR/INPUT button performs the DVD Setup function.

Function description of keyboard

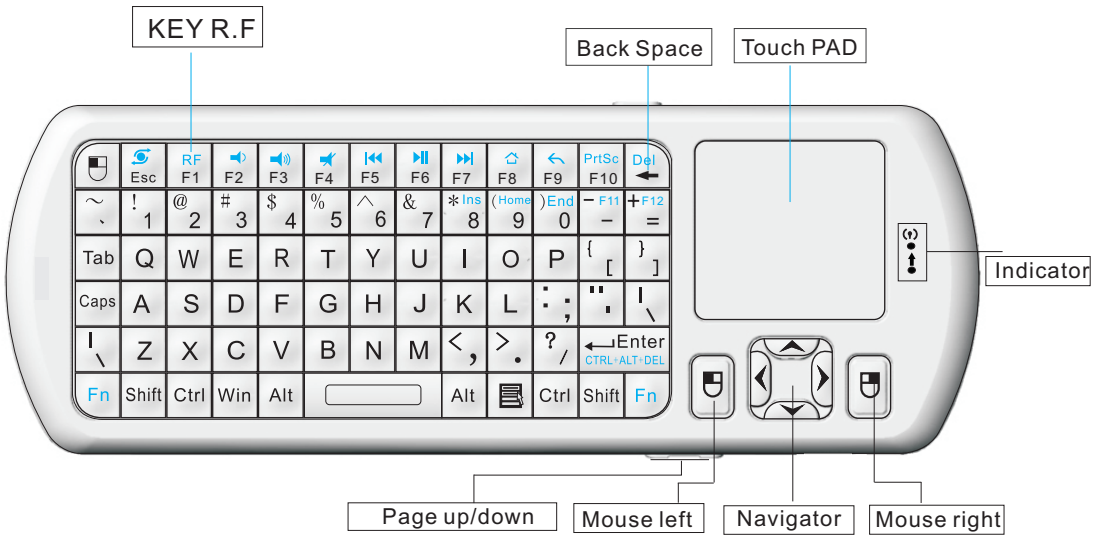

Item	Function	Operation
Mouse left	Mouse left	Press to operate like left mouse key
Mouse right	Mouse right	Press to operate like right mouse key
Key R.F	Key R.F	Press to pair keyboard and USB receiver
Navigate key	Cursor up,down left, right	Press the four keys to move cursor up, down, left,and right
Page up	Page up	Press to scroll page up
Page down	Page down	Press to scroll page down
Touch PAD	Mouse touch pad	Slide your finger on touch pad to move mouse cursor
Indicator	(signal)	Flash when signal transited
	⬆	Light up when switch to Caps lock input

Binds keys description

all binds key must work with Fn, for example: if you want to operate key “Home”, you have to press key “Fn” and key “9” together

Item	Function	Operation
Fn	Work with other binds keys	Press this key and other binds key together
	Change operation directions	Press “Esc” and “Fn” together
RF	Key R.F	Press “F1” and “Fn” together
	Volume down	Press “F2” and “Fn” together
	Volume up	Press “F3” and “Fn” together
	Mute	Press “F4” and “Fn” together
	Previous	Press “F5” and “Fn” together
	Stop	Press “F6” and “Fn” together
	Next	Press “F7” and “Fn” together
	Return to main page	Press “F8” and “Fn” together
	Back to previous page	Press “F9” and “Fn” together
PrtSc	Print screen	Press “F10” and “Fn” together
Del	Delete	Press “ ← ” and “Fn” together
Home	Home	Press “9” and “Fn” together
F12	F12	Press “=” and “Fn” together
F11	F11	Press “−” and “Fn” together
End	End	Press “0” and “Fn” together
Ins	Insert	Press “8” and “Fn” together
Ctrl+Alt+Del	Ctrl+Alt+Del	Press Fn+Enter together

Setup

- Battery Saver
  Your remote automatically turns off if the buttons are depressed more than 30 seconds. This will save your batteries should your remote get stuck in a place where the buttons remain depressed (e.g., between the sofa cushions).
- Code Saver
  Codes are stored in permanent memory while you are changing batteries so you will not lose any codes stored in the remote while you are changing batteries.
- Power-On Default
  The remote powers on in TV mode.
- Code Setup
  The SETUP button is used to setup the remote. You can either setup the remote using the code for your brand of product, from the code tables (on separate sheet), or you can search through the library of codes until you find a code that works for your product.
  Please refer to “Programming with Code Search” on page 9 for more information on using the code search feature to learn how to search through the library of codes for your products.
  NOTE: You can store any kind of code under any mode (except TV). I.E. you can store a VCR code under the CBL button, or a DVD code under the VCR button, etc.However, you can only store TV codes under the TV button.

Code Entry

- Direct Code Entry
  1. Press and hold the SETUP button until the red indicator stays on, then release the SETUP button.
  2. Press and release the desired mode button (TV,VCR, etc.). The red indicator blinks, then stays lit.
  3. Enter the 4 digit code from the code tables (on separate sheet).
     Note: after a valid code entry, the red indicator turns off. For an invalid code, the red indicator flashes.
  4. With your device on, press CHANNEL UP. If the device responds, no further programming is required.
     Note: If some buttons do not operate your equipment,try one of the other codes for your brand.

- Code Search

  If your product does not respond after you have tried all the codes for your brand, or if your brand is not listed,try searching for your code by following these steps.

  1. Manually turn on the device (TV, VCR, etc.) to be controlled.
  2. Press and hold the SETUP button until the red indicator stays on, then release the SETUP button.
  3. Press and quickly release the desired mode button (TV, VCR, etc.). The red indicator blinks off once.
  4. Press the CHANNEL UP button repeatedly (up to 300 times) until the device to be controlled changes channel. The red indicator blinks off with each button press. If you accidentally overshoot the code required, press the CHANNEL DOWN button to backtrack through the library until the device changes channel. Pressing CHANNEL UP changes direction to forward again.
  5. Press and release MUTE to install the code.Most users will store VCR codes under the VCR button,Cable codes under CABLE, etc. If (for example) you want to store a VCR code under CABLE, first follow the procedure for Direct Code Entry (previous page) and press CABLE in step 2 of Direct Code Entry, then enter ANY VCR code in step 3 of Direct Code Entry. The follow the steps above for Code Search (or Brand Search, below). Note: If the device does not have a CHANNEL UP button, use PLAY (VCR only) or POWER instead. Code Search starts from the currently stored 4 digit number under that mode.

- Code Search by Brand

  Lets you search for a code for a specific Brand within the Code Library for a particular manufacturer.

  1. Turn on the device (TV, VCR, etc.) to be controlled.
  2. Press and hold the SETUP button until the red indicator remains on, then release SETUP button.
  3. Press and quickly release the desired mode button (TV, VCR, etc.). The red indicator blinks off once.
  4. Press and release the numeric button (0-9) corresponding to desired Manufacturer (see table on code list sheet). The red indicator blinks off once.Note, pressing “0” performs a full library search same as normal Code Search Method on previous page.

5. Press the CHANNEL UP button ((or POWER or PLAY (VCR only)) repeatedly until the device to be controlled changes channel. The red indicator blinks off with each button press. If you accidentally overshoot the code required, press the CHANNEL DOWN button to backtrack through the library until the device changes channel. Pressing CHANNEL UP changes direction to forward again.
6. Press and release MUTE to install the code.
Brand Search Method entry is now complete.
Note: When all codes under a Brand have been searched the red indicator flashes rapidly for 3 seconds.

Code Identification Feature

The Code Identification Feature allows you to identify the 4 digit library code stored under your device key. For example, if you want to find out what 4 digit code is stored under your TV device key, follow the six steps below:

1. Press and hold the SETUP button until the red indicator stays on. Release the SETUP button.
2. Press and release the desired mode button (TV,VCR, etc.). The red indicator blinks, then stays lit.
3. Press and release the SETUP button. The red indicator blinks off.
4. To find the first digit for the code stored under the mode key pressed in step 2, press each numeric key from 0-9 in turn. When the red indicator blinks off the number you pressed is the first digit for the code you are searching for.
5. To find the second digit, repeat step 4, this time when the red indicator blinks off this is the second digit.
6. Repeat step 4 to find the third and fourth digits.

Programming Combo Device Codes

Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to set up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the TV button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

Controlling Combo Devices

Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) have separate buttons on the original remote to select the part of the Combo device to be controlled.For example, if your Combo device is a DVD/VCR then its original remote might have separate DVD and VCR buttons for selection of the Combo part you would control. The equivalent button functions can be found on your Philips remote by using the device Mode and SETUP buttons.
Referring to “Programming with Code Search” on page 10, setup a device Mode (e.g. DVD) with the correct code for your Combo device. Assuming the DVD/VCR Combo device is the example and its code is programmed under DVD Mode, press and hold the DVD Mode button for more than one second to send the DVD button command. To send the VCR button command, quickly press and release the SETUP button followed by pressing and releasing the DVD Mode button. This method can be applied similarly to all Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) and is available for all Modes. Note this feature is not supported by all codes.

Controlling Devices Requiring Separate Power On and Off Buttons

Some devices (e.g. certain RCA TVs) require separate Power On and Power Off buttons to turn the device on and off. The equivalent button functions can be found on your Philips remote by using the device Mode and POWER buttons. Referring to “Programming with Code Search” on page 8, setup a device Mode (e.g. TV) with the correct code for your device.
Assuming a TV device is the example and its code is programmed under TV Mode, to turn your TV on, press and hold the TV Mode button for more than one second to transmit the Power On button command. To turn the TV off, press and release the POWER button to transmit the Power Off button command. This method can be applied similarly to any device and is available for all Modes. Note this feature is not supported by all codes.

VCR/DVD/DVR Punch-Through Feature

This remote allows the 6 VCR transport buttons (i.e.PLAY, PAUSE, STOP, FF, REWIND, and REC) to Punch-Through control from any Mode programmed with TV, SAT or Cable codes to the last VCR, DVD or DVR programmed Mode you used. Normally other types of remotes only punch-through (from another Mode) on the 6 VCR buttons to the device programmed under the VCR Mode button. This is not much use if you are using a DVD programmed under a Mode other than VCR. For example, if you have 2 DVD, VCR or DVR devices programmed into this remote, the last one you accessed on the remote will be the one that has control of the 6 VCR transport buttons when in any other Mode. This feature will not operate if the programmed TV, SAT or Cable code has its own VCR transport button control e.g. a TV Combo, SAT/PVR, etc.

Volume/Mute Control and Punch-Through Feature

This remote lets you select which device Mode controls your Volume/ Mute buttons. The remote is initially set (factory default) for all device Modes programmed with “Visual” codes (e.g. TV, VCR, DVD, DVR, SAT & CABLE) and “Audio” codes (e.g. CD & AUDIO) to use their own Volume/Mute control if present. If the programmed “Visual” code has no Volume/Mute operation of its own then those buttons will punchthrough control to the TV Mode device without needing to change to TV Mode. Please refer to the next page for more information..

Any Mode chosen for Volume/Mute control MUST have its own Volume/Mute function or the Volume/Mute buttons will do nothing.

Setting ALL Volume/Mute Control to any one Mode

This routine can set all Modes to “punch-through” to any one chosen Mode for Volume/Mute button control without the needing to change to that Mode.

1. Press and hold the SETUP button until the red indicator turns on, then release the button.
2. Press and hold the MUTE button until the red indicator blinks off, then release the button.
3. Press and release the desired Mode button (TV,VCR, etc.) for Volume/Mute control, the red indicator blinks then stays on.
4. Press and release the MUTE button and the red indicator turns off. The red indicator will blink rapidly for three seconds if the Mode you have selected has no Volume/Mute control.
5. All other Modes will now punch-through to your chosen Mode for Volume/Mute control.
6. All “Visual” and “Audio” programmed Modes will now punch-through to the respective Modes you have chosen for Volume/Mute control.

Setting any Mode to use its own Volume/Mute Control

This routine can set any Mode to use only its own Volume/Mute control.
Note - If your chosen Mode has no Volume/Mute functions of its own then the Volume/Mute buttons will do nothing.

1. Press and hold the SETUP button until the red indicator turns on, then release the button.
2. Press and hold the MUTE button until the red indicator blinks off, then release the button.
3. Press and release the desired Mode button (TV,VCR, etc.), the red indicator blinks then stays on.
4. Press and release the VOLUME- (Down) button, the red indicator blinks then stays on.
5. Press and release the MUTE button and the red indicator turns off.
6. All “Visual” and “Audio” programmed Modes will now punch-through to the respective Modes you have chosen for Volume/Mute control.

Troubleshooting

➢Remote does not operate your product.

1.Press the mode button of the product you want to control.

2. Program the remote with a new code.

3. Install new batteries. (You might have to reprogram your remote after installing new batteries.)

4. Remote may not be compatible with your product.

➢Remote does not operate some features of your product.

1.Program remote with a new code.

2.Remote may not be able to operate all features of your product or button names might be different than your product.

➢Red Indicator blinks after you program a product code.

1. Remote did not accept the code.

2.Try to program the code again or try a different code.

Limited Lifetime Warranty

The manufacturer warrants that this product shall be free from defects in material, workmanship and assembly,under normal use, in accordance with the specifications and warnings, for as long as you own this product. This warranty extends only to the original purchaser of the product, and is nontransferable. Defective products,together with the dated proof of purchase, must be returned to the place of purchase for repair or replacement.

Activate audio (optional for KP-810-19VR)

1 Press audio active button to activate audio feature. Pluging your headset into headset jack,then you can enjoy music or chat with your friend through keyboard. Press this button again to cancel audio feature.

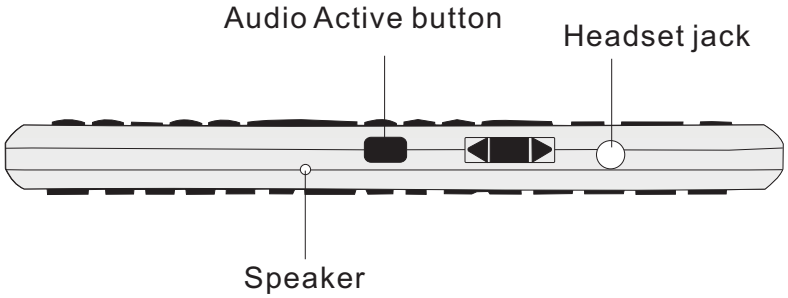

2 **Change audio output settings:** when pluging USB receiver into USB port on the computer system will set wireless audio HID device as default audio output device, and you only can hear sound from computer by the wireless keyboard, So if you want to set other audio device as output device, please follow below steps to change its settings:==> start==> settings==>control panel==>sound,audio and devices ==> change speaker settings, in the following popup window, please change the default audio output device to other output device, for example, if your device is Realtek HD Audio,please select Realtek HD Audio Device. Please re-start your player to enjoy music.